

BRAUN

FreeStyle

**SI 6595
SI 6590
SI 6560
SI 6550**









**SI 6260
SI 6250
SI 6120**



Type 4 681
Type 4 676
Type 4 675
Type 4 674

4-675-378/00/XII-06
Korea/GB

www.braun.com

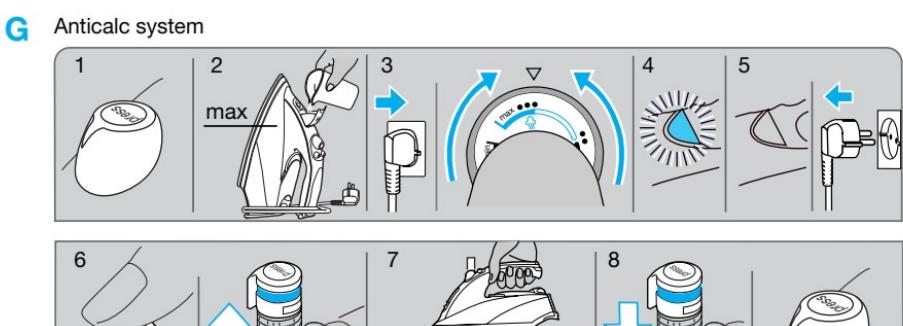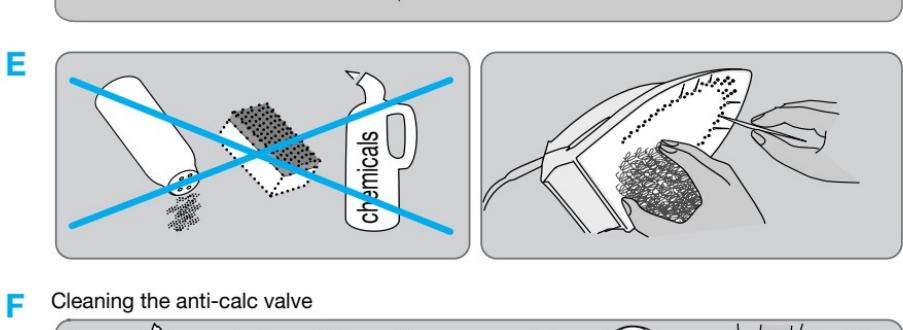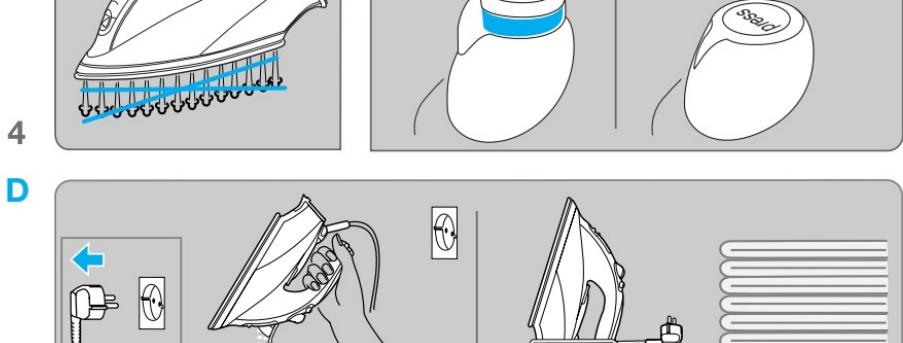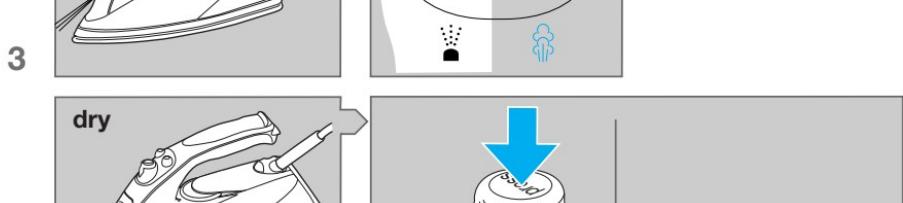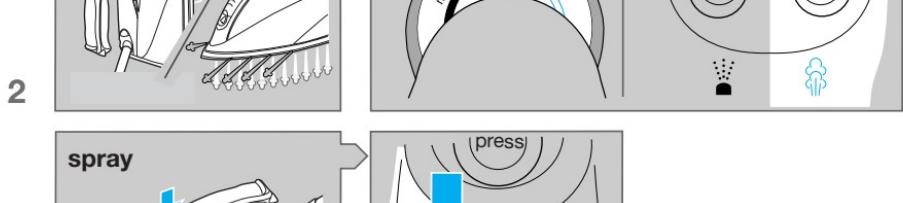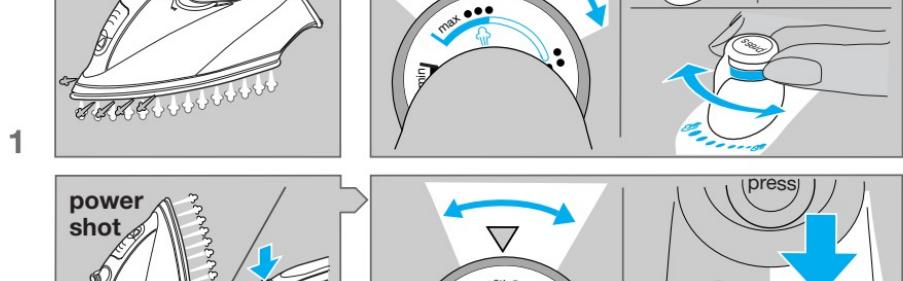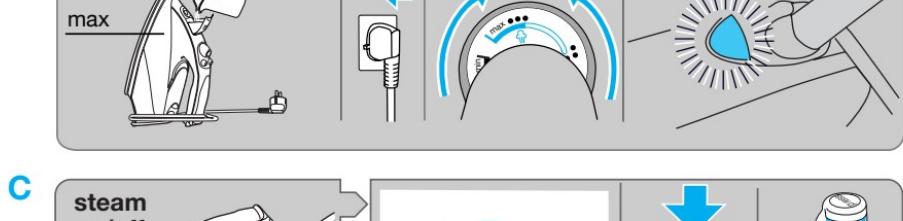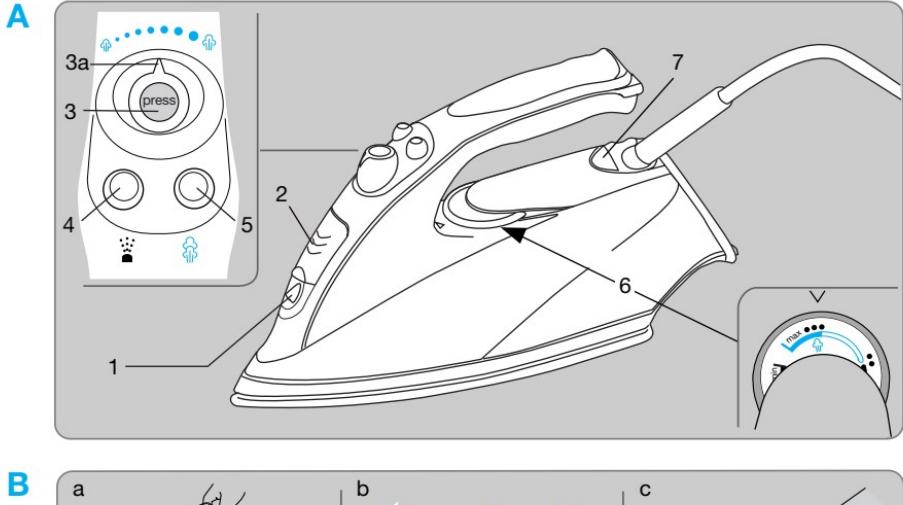

한국어

본 제품은 품질, 성능, 디자인에서 최고의 기준에 의거하여 제작되었습니다. 새로운 브리운 다리미가 귀하에게 만족을 드릴 수 있기를 바랍니다.

주 의: 다리미 열판에 리밸이 붙어 있는 경우 사용 전에 떼어 주십시오.

중요 안전 수칙

- 다리미를 사용하시기 전에 반드시 사용설명서를 읽으신 후 본 제품과 함께 보관하십시오.
- 제품에 표시된 전압과 가정 내 전압이 일치하는지 확인하시고, 교류전류에만 연결하여 사용하십시오.
- 물을 주입하기 전에 반드시 플러그를 뽑고 전원을 차단하고, 스팀 버튼을 눌러 아래로 내려진 상태(스팀 꺼짐)에 놓여 있는지 확인하십시오.
- 플러그를 뽑을 때에는 코드를 잡아당기지 말고 플러그를 잡아 당겨 주십시오.
- 코드가 끊어진 물체나 끊어진 다리미 바닥에 닿지 않도록 주의하십시오.
- 다리미를 물 또는 다른 액체에 담그지 마십시오.
- 다림질을 하다가 잠시 멈출 때에는 반드시 다리미 빙침대를 아래로 하여 똑바로 세워 놓으십시오.
- 다림질 도중 비록 잠시 자리를 비울 경우에도 플러그를 뽑아 주십시오.
- 다림질 도중 절대 스팀 버튼(3)을 잡아 당겨 앓지 마십시오.
- 어린이의 손이 닿지 않는 곳에 보관하십시오.
- 전기 다리미의 고온과 고온의 스팀으로 인해 피부에 화상을 입을 수 있습니다.
- 발생 가능한 사고를 대비해 전기 코드를 정기적으로 점검하시기 바랍니다.
- 제품의 결함이 발생한 경우(코드 포함) 사용을 중지하시고, 가까운 브리운 서비스 센터에 수리를 의뢰하시기 바랍니다.
- 브리운 전문 취급점이 아닌 곳에서 수리 받은 제품은 사용자에게 사고나 상해를 유발 할 수 있습니다.

A. 각 부분의 명칭

1. 스프레이 분출구
2. 물 탱크 입구
3. 스팀 버튼
- 3a. 스팀량 조절기
4. 스프레이 버튼
5. 파워스팀 버튼
6. 온도 조절기
7. 온도 표시등

B. 사용하시는 전에

- 본 제품은 일반 수돗물에 적합하게 설계되어 있습니다. 경수를 사용할 경우 수도율 50%와 증류수 50%의 혼합액을 사용하십시오.
- 물탱크의 <<max>> 표시까지 물을 채워주시고, 절대 증류수만으로 사용하지 마십시오.

- 다리미를 똑바로 세운 후 전원에 연결하십시오.
- 다리미의 빙침대에 있는 안내 사항이나 의류의 리벨을 참고하여 온도를 선택하십시오.

온도 표시등(7)은 적정 온도에 도달하면 자동으로 꺼집니다(약 1분 소요).

C. 다림질

1. 스팀량 조절

스팀 다림질을 하려면, 온도 조절기(6)가 적색 범위 내에 있어야 합니다. 스팀 모드를 시작하기 위해 스팀 버튼(3)을 누르십시오.

steam on  steam off 

스팀 버튼이 위로 올라온 상태에서 스팀량 조절기(3a)를 돌려 스팀량을 조절하십시오.

프리컨디셔닝
스팀이 열판 앞쪽으로도 수평으로 분사되어 직물을 다림질하기에 최적의 상태로 미리 준비해 주어 쉽고 빠르게 다림질 할 수 있습니다.

주의 스팀이 측면에서 분사됩니다.

2. 파워 스팀

사용 전 파워 스팀 버튼(5)을 3,4회 눌러 작동시켜 주십시오. 최소 5초의 간격을 두고 파워 스팀 버튼을 누르십시오.

파워 스팀 버튼은 일반 건조 다림질을 할 때도 작동이 가능합니다. 온도 조절기를 <<...>>과 <<max>> 범위에 두고 작동하십시오.

파워 스팀 기능은 걸려 있는 옷에 수직으로 사용하실 수 있습니다.

3. 스프레이 기능

스프레이 버튼(4)을 눌러 주십시오.

4. 일반 다림질

스팀 버튼(3)을 눌러 버튼을 아래로 내려 스팀 기능을 꺼주십시오(스팀 off).

D. 다림질 후에는

- 다리미의 플러그를 뽑고, 스팀 버튼(3)을 눌러 버튼을 아래로 위치시킵니다(스팀off).

- 다리미의 수명을 연장하려면 물 탱크를 비워서 보관하십시오.

- 다리미는 항상 건조한 장소에서 빙침대를 아래로 하여 보관하시기 바랍니다.

E. 보관 및 청소

다리미 바닥을 청소하기 위해서 철제 수세미를 사용하시고, 헝겊으로 깨끗이 닦아 내십시오.

연마제, 식초 또는 기타 화학물질은 절대 사용하지 마십시오. 손잡이, 파워 스팀 버튼, 스프레이 버튼의 부드러운 재질은 비눗물로 닦아 주십시오.

F. 석회침전물 제거 밸브 청소

석회침전물 제거 밸브는 스팀 버튼(3)의 아랫부분에 있습니다. 정기적으로 석회침전물을 제거해 주십시오(예: 스팀이 원활히 나오지 않을 때).

작동 순서는 다음과 같습니다:

- 1) 다리미의 플러그를 뽑고, 물탱크를 비우십시오.
- 2) 스팀 버튼을 눌러 위로 올라오게 합니다.
- 3) 스팀 버튼을 조심스럽게 빼내십시오(약간의 물이 열판에서 흘러나올 수 있습니다).
- 4) 석회침전물 제거 밸브는 손대지 마십시오.
- 5) 석회질이 부드러워질 때까지 식초(식초 원액은 안됨)나 레몬 주스에 담그십시오.
- 6) 비금속성 브러쉬를 사용하여 깨끗하게 청소하십시오.
- 7) 흐르는 물에 헹구십시오.
- 8) 스팀 버튼을 다시 끼워 넣으십시오.
- 9) 스팀 버튼의 작동 여부를 점검해 보기 위해 눌러 보십시오.

주 의: 다리미는 절대 스팀 버튼을 뺀 채로 사용하시면 안됩니다.

G. 석회침전물 제거/방지 시스템

물탱크의 찌꺼기가 스팀 분출구 밖으로 나올 때 또는 석회침전물 제거 밸브를 청소한 후에도 스팀 공급이 원활하지 못할 때 다음과 같이 스팀 탱크를 청소 합니다:

- 1) 스팀 버튼이 아래쪽으로 눌려져 있는지 확인하십시오.
- 2) - 3) 물탱크에 물을 가득 채우고, 전원을 연결하여 온도조절기를 <<...>>에 설정하십시오.
- 4) - 5) 온도 표시등이 깨질 때까지 기다렸다가 다리미의 플러그를 뽑으십시오.
- 6) - 7) 개수대 위에서 다리미를 들고 스팀 버튼을 눌러 버튼이 위쪽으로 올라오도록 한 후 조심스럽게 버튼을 잡아당겨 돌려 뺍니다.

주 의: 스팀 버튼을 위로 잡아 당겼을 때 뜨거운 물과 스팀이 밑바닥에서 분출될 우려가 있습니다.

- 8) 스팀 버튼을 눌러 다시 아래쪽으로 내려가도록 하십시오.
- 9) - 10) 물 탱크에 물을 가득 채우고, 전원을 연결하여 <<...>>에 온도를 설정하십시오.

- 11) - 13) 온도표시등이 깨지면, 파워 스팀 버튼을 4번 눌러 다리미를 헹구십시오.
- 다리미의 전원이 차단되면 열판이 식을 때까지 기다렸다가 그림E와 같이 청소하시기 바랍니다.

주 의: 다리미는 절대 스팀 버튼을 뺀 채로 사용하시면 안됩니다.

H. 이럴때는 어떻게

이상현상	조치
------	----

스팀 분출구에서 물방울이 나올 때	스팀 조절기를 시계반대 방향으로 돌려 스팀량을 줄이거나 스팀버튼을 눌러 스팀기능을 끄십시오.
제트 스팀 버튼을 사용하실 때는 사용간격을 좀 더 길게 두고 사용하십시오.	고온으로 온도를 조절해 주십시오.
스팀 기능이 전혀 되지 않을 때	스팀 버튼이 위로 올라오도록 누르십시오.

스팀이 적게 분출되거나 전혀 나오지 않을 때	석회침전물 제거 밸브를 청소하십시오(그림F 참조).
--------------------------	------------------------------

상기 사항은 예고 없이 변경될 수 있습니다.

본 제품은 89/336/EEC 지침과 저전압 규정(73/23/ EEC)에 의거하고 EMC 조항을 준수하고 있습니다.



English

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun FreeStyle.

Notice: Remove the sole plate label, if any, before first use.

Important safeguards

- Before using the iron, read the use instructions completely. Keep the use instructions during the entire life of the iron.
- Make sure your voltage corresponds to the voltage printed on the iron. Connect the iron to alternating current only.
- Always unplug the iron before filling with water and make sure the steam button is in its lower position (steam off). Always pull the plug, not the cord. The cord should never come in contact with hot objects or with the hot sole plate.
- Never immerse the iron in water or other liquids.
- During ironing pauses, always place the iron upright on its heel rest. Unplug it when leaving the room, even if only for a short time.
- Never pull out the steam button (3) during ironing.
- Keep the iron away from children. Electric irons combine high temperatures and hot steam that could lead to burns.
- Check the cord regularly for possible damage.
- If the appliance (including cord) shows any defect, stop using it and take it to a Braun Service Centre for repair.
- Faulty or unqualified repair work may cause accidents or injury to the user.

A Description

- 1 Spray nozzle
- 2 Water tank opening
- 3 Steam button
- 3a Steam regulator
- 4 Spray button
- 5 Power shot button
- 6 Temperature selector
- 7 Temperature pilot light


B Before starting off

- This iron is designed for tap water. If you have extremely hard water, we recommend to use a mixture of 50% tap water and 50% distilled water. Fill the water tank to «max» marking. Never use distilled water exclusively. Do not add any additives (e.g. starch).
- Keep the iron in the upright position and connect it to the mains. Select the temperature according to the ironing guide on the heel rest of the iron or on the label in your garments.
- The temperature pilot light (7) goes off, when the desired temperature is reached (after approx. 1 minute).

C Ironing

1 Steam on/off

For steam ironing, the temperature selector (6) must be set within the red range. Press the steam button (3) to start the steam mode.



With the steam button in its upper position, turn the steam regulator (3a) to adjust the steam quantity.

Preconditioning

Steam develops also horizontally at the front area of the sole plate. This pre-conditions the textiles by «pre-steaming», thus making ironing easier.

Be careful – steam comes out laterally.

2 Power shot

Prior to use, press the power shot button (5) 3 to 4 times to activate it. Press the power shot button in intervals of at least 5 seconds.

Power shot can be activated when dry ironing. However, the temperature selector has to be set in the range between «•••» and «max». The power shot function can also be used in the vertical position for steaming hanging clothes.

3 Spray function

Press the spray button (4).

4 Dry ironing

Turn the steam mode off by pressing the steam button (3) so that it catches in the lower position.

D After ironing

- Unplug the iron and press the steam on/off button (3) so that it catches in its lower position (steam off).

- To prolong the life of the iron, empty the water tank.

- Store the cool iron in a dry place always standing on its heel rest.

E Maintenance and cleaning

To clean the sole plate, use steel wool. Then wipe the sole plate clean with a cloth.

Never use a scouring pad, vinegar nor other chemicals. To clean the soft material of handle and power shot and spray buttons, use soapy water.

F Cleaning the anticalc valve

The iron's anticalc valve is located at the lower end of the steam button (3). It has to be decalcified regularly (e.g. when the steam development is insufficient).

Proceed as follows:

- 1) Unplug the iron and empty the water tank.
- 2) Press the steam button so it is lifted.
- 3) Remove carefully (some water may now leak from the sole plate).
- 4) Do not touch the anticalc valve.
- 5) Immerse in vinegar (not vinegar essence) or lemon juice until the lime becomes soft.
- 6) Use a non-metallic brush until all openings are clean.
- 7) Rinse under running water.
- 8) Re-insert the steam button.
- 9) Press to check the steam on/off function.

Note: the iron must never be used without the steam button.

G Decalcifying / anticalc system

When scale particles come out of the steam vents or when the steam development is insufficient even after cleaning the anticalc valve, you should clean the steam chamber as follows:

- 1) Make sure the steam button is in its lower position.
- 2)–3) Fill water into the tank, connect to the mains and select the «•••» temperature setting.
- 4)–5) Wait until the pilot light turns off. Unplug the iron.
- 6)–7) Hold the iron over a sink, then press the steam button so it is lifted, carefully pull it up, turn it and rest it in this position.

Caution: When the steam button is pulled up, hot water and steam will come out from the sole plate.

- 8) Push back the steam button until it catches in the lower position.
- 9)–10) Fill water into the tank, connect to the mains and select the «•••» temperature setting.
- 11)–13) When the pilot light goes off, press the power shot button 4 times to rinse the iron. Disconnect the iron and wait for the sole plate to cool off, then clean it as described above in section E.

Note: the iron must never be used without the steam button.

H Trouble-shooting guide

Problem	Remedy
Drops coming out of the steam vents	Turn the steam regulator anti-clockwise to reduce the steam or press the steam button to turn the steam off. Take longer intervals when pressing the power shot button. Select a higher temperature setting.
No steam at all	Press the steam button so that it is lifted.
Less steam develops or no steam at all	Clean the anticalc valve (see F).
Calcium particles coming through the steam vents	Decalcify the steam chamber (see G).

Subject to change without notice.


This product conforms to the European Directives EMC 89/336/EEC and Low Voltage 73/23/EEC.



설유보호기능



최초 사용 시 설유보호열판을 부착하기 전에
약 2분 정도 설유보호열판 없이 다림질하십시오.
브라운 설유보호열판은 섬세한 직물을 강한 열로부터
보호하고 대부분의 어두운색 직물을 중간천 없이도
다림질 할 수 있도록 해줍니다.
다림질을 시작하기 전 직물의 반응을 알아 보기 위하여
직물인쪽 부분을 다림질 하여서 이상이 없는지를
먼저 확인하시기 바랍니다. 설유보호열판을 부착한 후

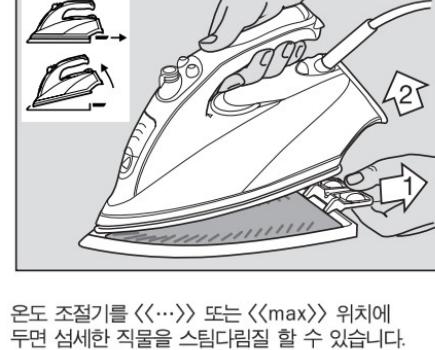

온도 조절기를 <<...>> 또는 <<max>> 위치에
두면 섬세한 직물을 스팀다림질 할 수 있습니다.
설유보호열판을 부착한 후에, 다림질을 하기 전
1분30초 정도 기다려주십시오. 항상 다리미는
설유보호열판과 분리하여 보관해 두십시오

Before attaching the Textile Protector for the first time, iron approximately 2 minutes without the Textile Protector.

The Braun Textile Protector protects delicate fabrics from heat damage and makes it possible to iron most dark fabrics without an intermediate cloth. To check the reaction of your fabrics before you start ironing, we recommend that you iron a small section of material on the reverse side. With the Protector, you are able to iron delicate fabrics with the temperature setting «●●●» or «max», so that you can use all steam functions your iron offers.

After having attached the Textile Protector, wait about 1 1/2 minutes before you start ironing. Always store your iron with the Textile Protector detached.

품질 보증

- 본 제품은 **구입일로부터 1년간** 품질을 보증합니다.
- 1년간의 품질 보증기간 동안 제품 자체나 생산과정
에서 비롯된 불량품은 상태에 따라 무료보수 또는
교환해 드립니다.
- 보증기간 내에라도 소비자의 귀책사유에 의한 파손
(전압을 잘못 사용한 경우, 부적절한 전원 플러그에
연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에
지장이 있는 경미한 결함 등은 무상수리 또는 교환이
적용되지 않습니다.
- 브라운 서비스 센터가 아닌 다른 곳에서 수리를
하였거나 브라운 정품이 아닌 부품을 사용하였을
경우에는 품질보증 대상에서 제외됩니다. 그리고
본 제품의 구입일자가 판매점에 의해 혹은 구입시의
영수증에 의해 확인되어야만 정상적인 품질 보증품으로
인정됩니다. (**구입시 영수증을 잘 보관하시어
애프터 서비스 시 불이익이 없도록 하십시오.**)
- 애프터 서비스를 받으셨더라도 원래의 품질보증기간이
연장되는 것은 아닙니다.

브라운 제품의 보상기준은 재정경제부고시 소비자
피해보상규정에 따릅니다.
소비자상담실: 1588-1588
가까운 대우일렉 서비스 센터에서 A/S를 받으실 수 있습니다.

브라운제품:
전국 유명 백화점, 할인점, 양판점 및 전자상가에서 구입할 수 있습니다.
<http://www.braun.com>
<http://www.braun.co.kr>

